
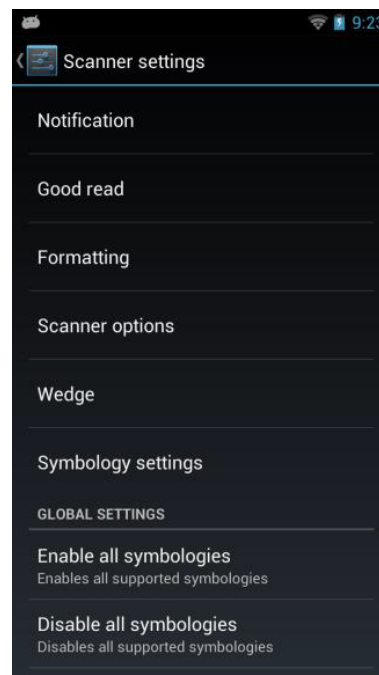



How to configure Datalogic Mobile Computers (Memor 1, Memor 10, Memor 11, Scorpio X4, Scorpio X5, Falcon X4, Joya Touch A6, DL Axist) for MobileNAV Android

Configure Datalogic Mobile Computer


- Launch **Scanner Settings** application from Settings menu (on newer versions DataLogic Settings app, and then choose **Scanner&Decoder**)

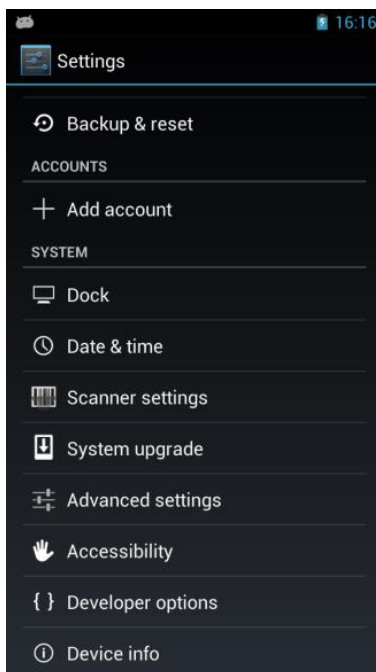


- At **Formatting** menu clear prefix and postfix (new newer versions **Formatting** -> **Standard Formatting**)

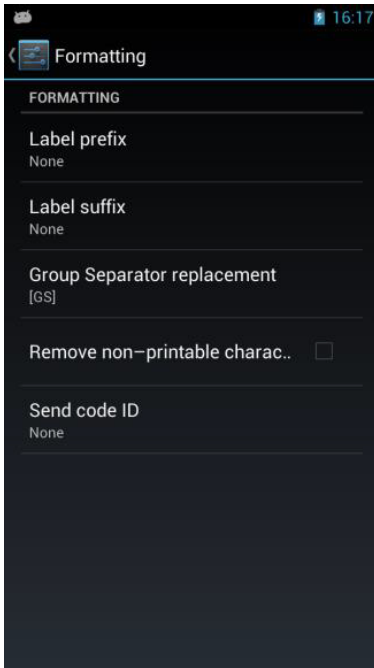

- At **Wedge** menu
 - o Disable **keyboard wedge**
 - o Enable **intent wedge**

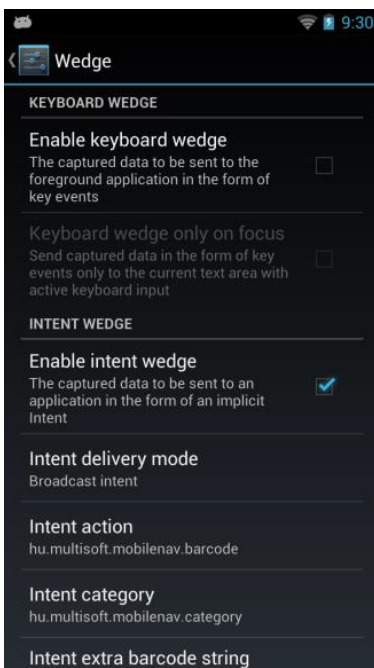

- Set intent wedge properties
 - Intent delivery mode: **Broadcast intent**
 - Intent action: **hu.multisoft.mobilenav.barcode**
 - Intent category: **hu.multisoft.mobilenav.category**
 - Intent extra barcode string: **com.datalogic.decode.intentwedge.barcode_string**

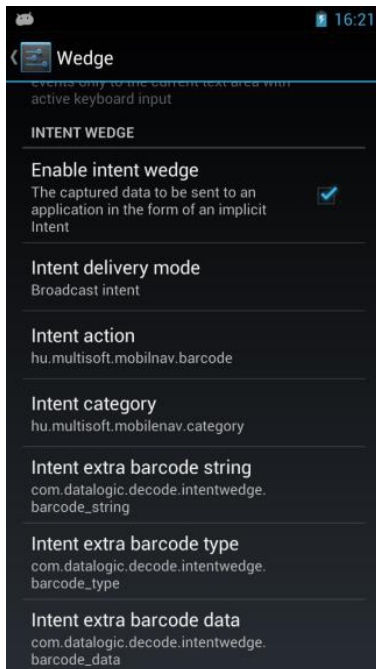

- At **Scanner settings** menu
 - Click on **Commit** to save configuration

Configure Mobilenav

- Launch **MobileNAV** application
- Log into online or offline
- Click on main menu(MobileNAV icon on the top left)
 - a. Select **Settings**
 - b. Barcode mode: **Device-specific**
 - c. click on **Configure...** button
 - d. set properties based on intent wedge properties
 - i. Intent action: **hu.multisoft.mobilenav.barcode**
 - ii. Intent category: **hu.multisoft.mobilenav.category**
 - iii. Data id: **com.datalogic.decode.intentwedge.barcode_string**

